

BRAUN

MultiQuick System



Register your product
www.braunhousehold.com/register

MQ60
MQS270


READ ALL INSTRUCTIONS.

1. The use of a motorunit not sold or recommended by Braun may cause fire, electrical shock or risk of injuries to persons.
2. Blades are sharp. Handle carefully when removing, inserting or cleaning. Exercise the same care when removing, inserting the chopping blade or disc for the food processor

and chopper accessories. Always verify that the accessory enclosure is free of cracks or other damages.

3. Remove any packaging materials and promotional labels before using the appliance for the first time.
4. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
5. Do not operate your appliance in an appliance garage or under a wall cabinet.

SAVE THESE INSTRUCTIONS

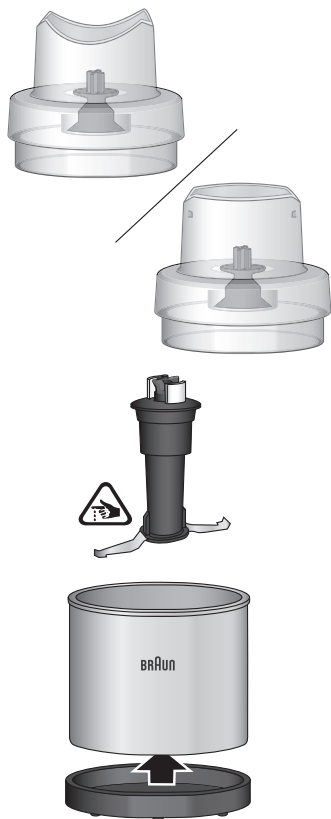

Type ✓



4165

4191

4192/4193

4199



4200

HB302xx

HB501xx

HB701xx

HB901xx








DE Bitte beziehen Sie sich auf das Hauptbenutzerhandbuch

EN Please refer to main user manual

FR Veuillez vous référer au manuel d'utilisation principal

ES Por favor, consulte el manual de usuario principal

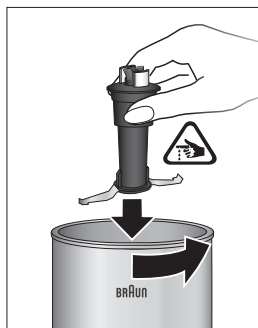

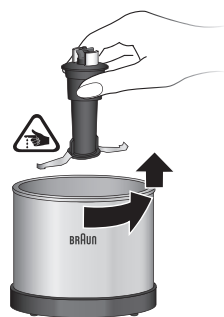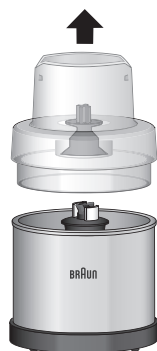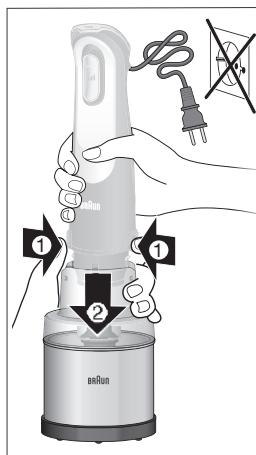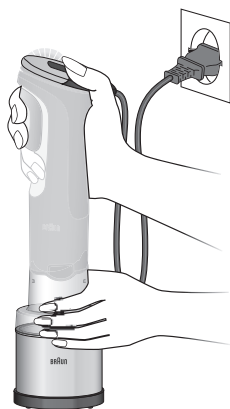

						
max.	70 g 2.5 oz	30 g 1 oz	20g/5 0.75 oz	60 g 2 oz	40 g 1.5 oz	90 g 3 oz
speed						

						
max.	130 g 4.5 oz	60 g 2 oz	100 g 3.5 oz	30g 1 oz	20 g 0.75 oz	150 g 5.25 oz
speed						

