


## KAX400PL

instructions

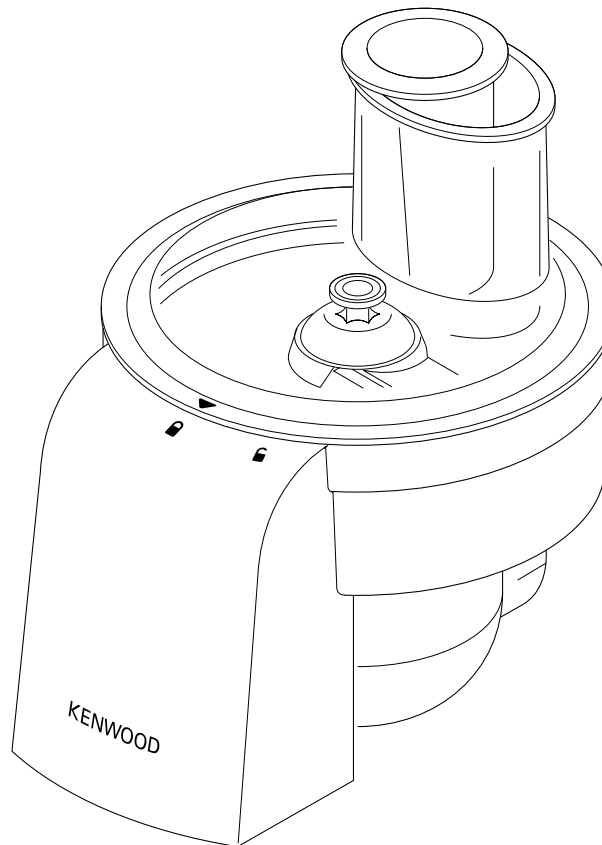


**Kenwood Ltd**


New Lane  
Havant  
Hampshire  
PO9 2NH


[kenwoodworld.com](http://kenwoodworld.com)





This KAX400PL attachment features the Twist Connection System  and is designed to fit directly on the latest generation Kenwood Chef models (identified as TYPE KVC, KVL and KCC).

To check that this attachment is compatible with your kitchen machine you will need to ensure both components feature the Twist Connection System .

If your kitchen machine features the Bar Connection System  you will also need an adaptor before operation is possible. The reference code for the adaptor is KAT001ME. For more information and how to order the adaptor visit [www.kenwoodworld.com/twist](http://www.kenwoodworld.com/twist).

Use the dicing attachment to cut a variety of foods such as carrot, swede, beetroot, apples and ham into cubes.






#### **before using for the first time**

- Wash the parts: see 'Cleaning'.

## key

- ① pushers: large and small
- ② feed tube
- ③ lid
- ④ shaft
- ⑤ slicing disc
- ⑥ finger grip
- ⑦ dicing grid
- ⑧ dicing disc
- ⑨ finger holes
- ⑩ slinger disc
- ⑪ body
- ⑫ food outlet
- ⑬ gearbox assembly
- ⑭ cleaning tool

## to assemble your dicing attachment

- 1 Place the slinger disc into the body, ribs uppermost.
- 2 Hold the dicing disc by the finger holes and fit on top of the slinger disc. (The dicing grid should be on the opposite side to the food outlet with the mark on the dicing disc  aligning with the mark on the body .
- 3 Hold the slicing disc by the finger grip and push onto the shaft ①.
- 4 Fit the lid onto the body, line up the  symbol on the lid with the  on the body, then turn to  symbol to lock into place.

## to use your dicing attachment

### **USE SPEED 4 TO MAX**

- 1 Lift off the slow speed outlet cover ②.
- 2 With the gearbox assembly in the position shown, locate to the slow speed outlet and rotate to lock in place ③.
- 3 Fit the dicing attachment to the gearbox – position the food outlet to the front and rotate clockwise to secure ④.
- 4 Connect the appliance to the power supply and place a bowl under the food outlet.
- 5 Choose which feed tube you want to use. The pusher contains a smaller feed tube for processing individual items or thin ingredients.  
**To use the small feed tube** - first put the larger pusher inside the feed tube ⑤.  
**To use the larger feed tube** - use both pushers together ⑥.
- 6 Put the food inside the feed tube (refer to the recommended usage chart for suitable foods and their preparation).

7 Switch on the appliance and at the same time push down evenly with the pusher – never put your fingers in the feed tube or use excessive force.

8 Switch off and unplug.  
9 To remove – rotate the attachment anticlockwise and lift off. Then rotate the gearbox forward to remove.

## recommended usage chart

<b>Food</b>	<b>Preparation</b>	<b>Hints and tips</b>
Swede, potato and turnip	Remove skin and cut to fit feed tube.	Process raw.
Carrot	Remove skin.	For best results process one at a time down the small feed tube. Process raw.
Beetroot	Remove skin.	Stack to fit feed tube. Process raw or cooked.
Aubergine	Halve lengthways and if necessary cut to fit the feed tube.	Process half at a time.
Pepper	Halve and de seed.	Stack upright in feed tube.
Cucumber and courgette	For best results remove skin.	
Onion	Peel and halve to fit feed tube.	Produces roughly chopped pieces rather than cubes.
Celery	Trim sticks to the same length.	Stack to fit feed tube.
Hard fruits- apple, pear	Remove skin if required. Halve, core and remove pips.	
Hard cheese- Gruyere Swiss	Cut to pack feed tube.	Process straight from the fridge.
Hard boiled eggs	Hard boil and allow to cool before removing shells.	Stack in feed tube. Produces roughly chopped pieces rather than cubes.
Ham	Remove bones. Cut into blocks.	Use a block of ham rather than slices. Process straight from the fridge.
Pickled gherkin	Drain.	Process down the small feed tube.

### hints

- For best results, use raw fresh fruit and vegetables.
- If processing cooked vegetables, refrigeration overnight is recommended.
- Don't cut food up, just trim to fit the feed tube. Fill the width of the large feed tube fairly full. This prevents the food from slipping sideways during processing and will give optimum results. Alternatively, use the small feed tube.

- Always remove pips or bones etc., from food before processing.

### Note:

- Due to the various sizes and shapes of foods, the diced results will contain some misshapen pieces, this is normal.
- Some foods such as chorizo and Feta cheese are not recommended for use with this attachment.

## cleaning

- Always switch off and unplug before removing the attachment from the appliance.
- Dismantle the attachment fully before cleaning.
- For easier cleaning always wash the parts immediately after use.
- Handle the cutting discs with care – they are extremely sharp.
- Use the cleaning tool to dislodge any food which may become trapped in the dicing grid. Push the food out from underneath the dicing grid 7.
- Never immerse the gearbox assembly in water or allow it to get wet.

All remaining parts can be washed in hot soapy water, then dried thoroughly. Take care as the cutting discs are sharp. Alternatively wash in the dishwasher (top rack only).

- If your Kenwood product malfunctions or you find any defects, please send it or bring it to an authorised KENWOOD Service Centre. To find up to date details of your nearest authorised KENWOOD Service centre visit [www.kenwoodworld.com](http://www.kenwoodworld.com) or the website specific to your Country.
- Designed and engineered by Kenwood in the UK.
- Made in China.

## service and customer care

### **UK only**

If you need help with:

- using your attachment
  - servicing or repairs (in or out of guarantee)
- ☎ call Kenwood customer care on **023 9239 2333. Have your model number ready (KAX400PL) and date code (e.g. 18B08) ready.** They are on the attachment outer carton.

### ● **spares and attachments**

☎ call 0844 557 3653.

### **other countries**

- If you experience any problems with the operation of your attachment, before requesting assistance visit [www.kenwoodworld.com](http://www.kenwoodworld.com).
- Please note that your product is covered by a warranty, which complies with all legal provisions concerning any existing warranty and consumer rights in the country where the product was purchased.