

en Accessory with non-stick coating

This accessory has a high-quality non-stick coating. It is easy to clean. It is heat-resistant up to 250 °C.

Before using this accessory for the first time, clean it thoroughly with hot soapy water and a soft cloth.

The accessory is suitable for dishwashers.

Do not grease the accessory. Products such as biscuits, puff pastry or choux pastry can be removed easily after baking. We recommend using greaseproof paper for Swiss rolls.

If you cook fruit pies regularly, the fruit acids may cause marks. These do not affect the accessory's non-stick coating.

Never cut anything directly on the accessory and do not use any sharp cooking utensils. Scratches on the accessory reduce its non-stick properties.

Use hot soapy water and a soft cloth to clean the accessory after every use. Leave dirt that has dried on to soak for a few minutes.

Warning!

Extreme heat destroys the non-stick coating and produces poisonous gases – there is a risk of serious damage to your health and the health of others.

- The use of accessories with a non-stick coating is not permitted for the operating modes "Full-surface grill" and "Centre-area grill" (irrespective of the temperature in each case).

For all other operating modes, a maximum set temperature of 250 °C applies.

- Never clean the accessory as part of the automatic self-cleaning process. During automatic self-cleaning, the oven is heated up to approx. 500 °C.



9000000386