 


KAB90.000SS

instructions

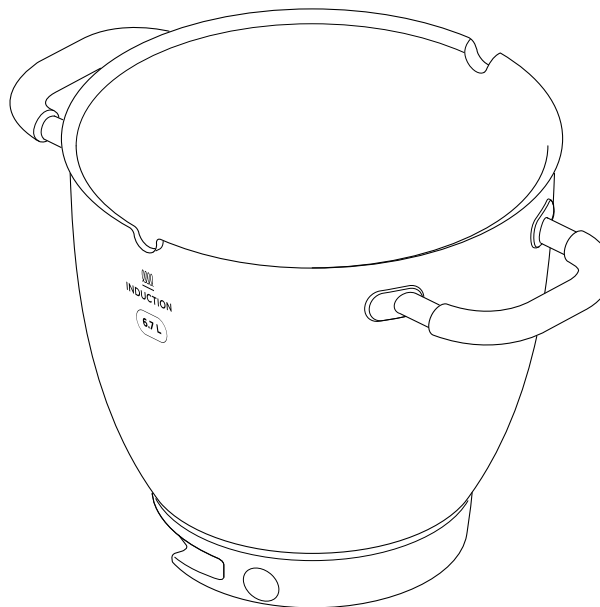

 
 
Kenwood Ltd

New Lane
Havant
Hampshire
PO9 2NH

kenwoodworld.com



English

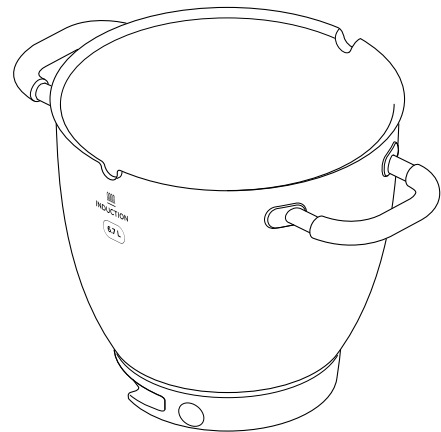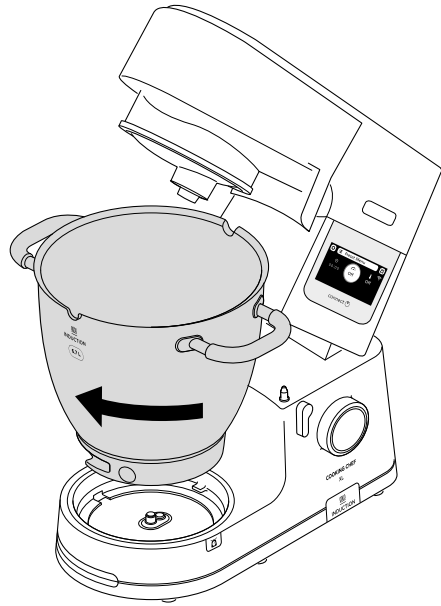

The Cooking Chef bowl has been designed only for use with the Cooking Chef models - TYPE KCC90 & TYPE KCL95.

Safety

- Keep away from heat sources - do not use the bowl on a hob or in an oven.
- Never use a wire brush, steel wool or bleach to clean your stainless steel bowl. Use vinegar or a suitable descaler to remove limescale.
- If food sticks or burns on the inside of the bowl, remove as much as possible using a spatula. Fill the bowl with warm soapy water and allow to soak. Remove any stubborn deposits using a nylon brush.
- Any discolouration of the bowl will not affect its performance.
- Refer to your main Cooking Chef instruction manual on the use of the bowl, its cleaning and if necessary, adjusting the height of the bowl tools.

Service and Customer Care

For Service and Customer Care information refer to your main Cooking Chef manual or visit www.kenwoodworld.com.

- Designed and engineered by Kenwood in the UK.
- Made in China.